

# FALCON

powered by WebOS Hub



## Quick Start Guide

FN-TV24-S

---

Please read this manual carefully before TV operation.  
Retain it for future reference.

## PREFACE

1. Read this Quick Start Guide before starting Set-up.
2. Then, carefully follow the Instructions, heeding all Warnings.
3. Do Not remove the TV back cover or block the TV ventilation openings.
4. Do Not use the TV near water or a heat Source.
5. Do not pinch or cut the Power Cord.

**Note:**

The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

## WARNING

---

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.

---


The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

# 1. Unpack the TV and Accessories from the Carton Box

1. Please see the unpacking instructions on the top of the carton box (and below).
2. As noted, be careful not to grab or put pressure on the TV screen.
3. Check the carton box carefully for all included Accessories.

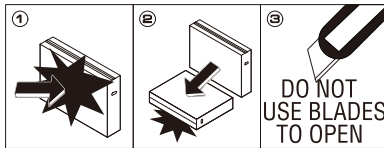

For 27" - 58"



UNPACK  
WITH CARE



For 27" - 58"



UNPACK  
WITH CARE



## 2. Package Contents

- > LED television
- > Remote control with batteries
- > DVD remote control
- > Red cigarette lighter
- > Quick Start Guide
- > VESA mounting screws
- > Power adaptor (12V, 3A)
- > Mini AV Cable
- > Base stand and screws

## 3. What You Will Need for Set-up (Not Included)

- Philips Head Screwdriver
- Internet Connection (Needed for Smart TV Streaming)
- Wireless Router (Needed for Smart TV Streaming)
- Computer, Tablet or Smart Phone (Needed for Smart TV Set-Up)

## 4. Attach the Table Stands

How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.

-Before attaching/detaching the stand, make sure to turn off the TV.

-Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.


### Assembling instruction:

Put the television on the table, fix the stands with two screws given in the carton .

Step1: Fasten the base assembly with screws given in the carton.


Step2: Insert the assembled base into the hole, take out screws provided with TV set and tighten them into screw holes.

- To disconnect the stand from the TV, perform the above steps in reverse order.

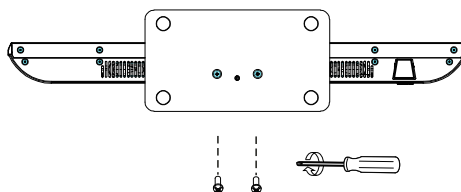

## 5. Front panel

The buttons on the lower-right panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

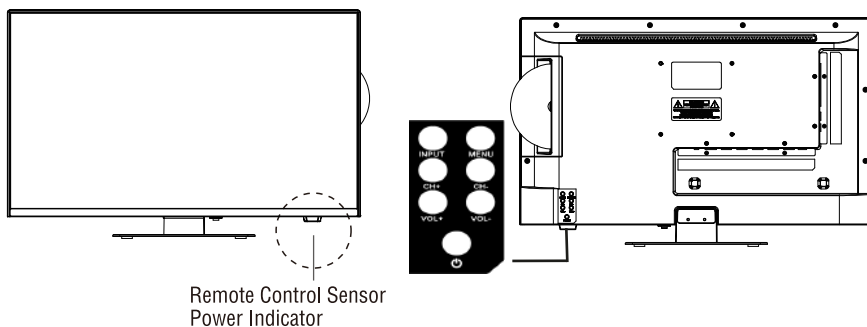

## 6. Specifications

Model	FN-TV24-S	
Display size	24" Diagonal (max.)	
LED panel resolution	1920X1080	
Speaker output power	≤5W	
Power supply	DC 10-30V	
Standby consumption	≤0.5W	
Antenna input	75 ohms	
Controller power	1.5V x 2 (Two AAA size batteries)	
Dimensions (LxWxH)	TV with stand	W542xD349xH110(mm)
	TV without stand	W542xD318xH45(mm)
Weight (Net weight)	TV with stand	3.2kg
	TV without stand	3.1kg
Work temperature	0°C-40°C	


### NOTES:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

## 7. Connect The TV

1. Insert the female end of the Power Adaptor into the back of the TV.  
Then carefully plug the standard DC plug end into a 12 V DC outlet.
2. If you are connecting other devices to the TV, utilize the appropriate optional cables and connect to the appropriate ports on the back or side of the TV.

Location of Connections

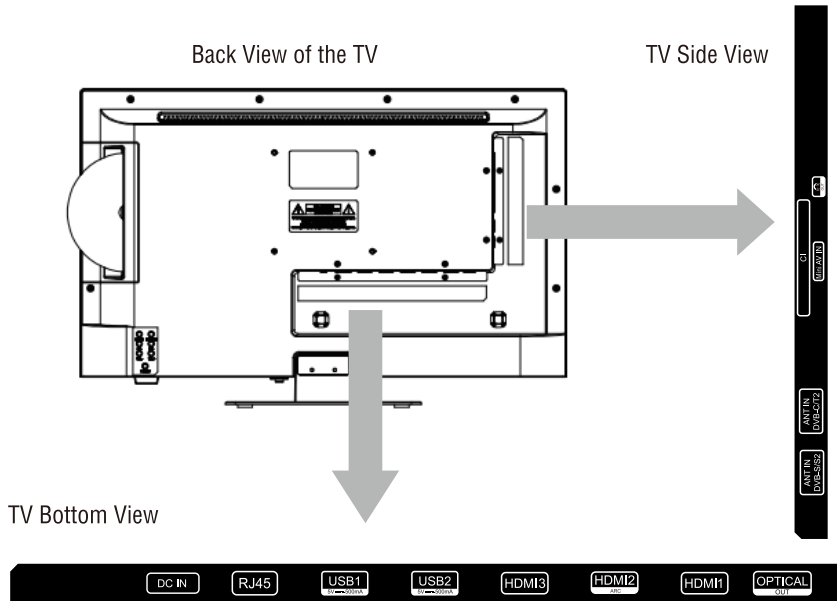


## 8.Prepare The Remote Control


Remove the battery cover and insert the provided batteries. Then replace the battery cover.

### Installing Batteries



- 1 Open the battery compartment cover on the back side.

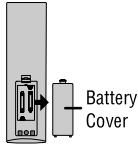

- 2 Insert two 1.5VAAAsize batteries in correct polarity. Don't mix old or used batteries with new ones.

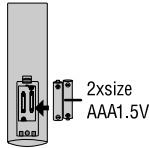

- 3 Closed the cover.

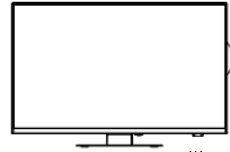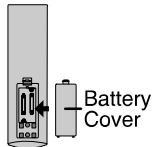

- ✦ Point the remote towards the remote control sensor of the TV and use it within 8 meters.

- ✦ Put the used batteries into the recycling bin since they can negatively affect the environment.

Note:

- 1) Batteries should last approximately one year under normal use (actual use will vary).
- 2) If the TV will remain inactive for an extended period of time, remove the batteries from the remote control to avoid possible damage due to leakage.
- 3) Do not mix old and new batteries or different types of batteries.
- 4) Do not throw batteries into fire or water.
- 5) The batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire or the like.



# Remote





**POWER:** ON/OFF.

: Selects an input source.


**+/-** : It adjusts the volume level.

: You can change the program .

: Mutes the sound.


: Displays the Home menu.

:Voice input

: It displays the additional buttons on the remote control.

: Return to the previous menu / Exit the menu

: Enters the Quick Settings menu.

: Channel list.

**Netflix:** go to Netflix app.

**Prime Video:** go to Prime Video app.

**Disney+:** go to Disney+ app.

**LG Channels:** go to LG channels.

**Fplay:** go to Freeview Play app.

**Rakuten TV:** go to Rakuten TV app.



- POWER (red)
- EJECT (green)
- SETUP
- MENU
- GOTO
- NUMBER KEYS
- ▶||
- 
- ◀◀ / ▶▶
- OK
- Switch DVD mode on/off
- Ejects the DVD
- DVD mode settings
- Opens the main menu
- Function key
- For entering e.g. program numbers
- Start / Pause
- Stopp
- Wind forward / Wind backward
- Previous chapter / Next chapter
- Confirm selection

To play a DVD, please use the DVD remote control included in the delivery contents. You can use it to switch to DVD mode or back to TV mode via the power button on the DVD remote control.

In addition, the device automatically switches to DVD mode when you insert a DVD into the DVD slot provided for this purpose.

Operation in DVD mode depends on the data structure on the DVD.

For example, an original purchased movie will immediately switch to the main overview for playback.

**Note:**

To put the DVD remote control into operation, please remove the battery contact foil by pulling it out.

## 9. Trouble Shooting

### Having trouble?


Don't worry, it's usually an easy fix.

---

After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.

---

## WEE2.0

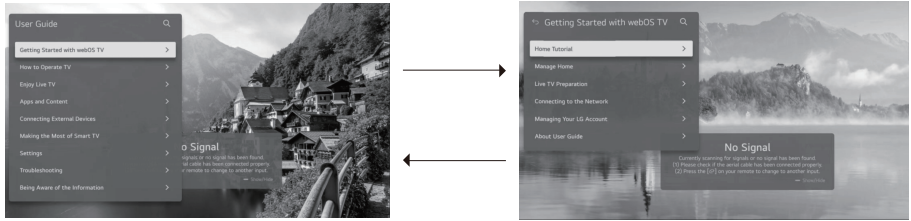


It provides guides related to TV manipulation, broadcasting, content utilization, device connection, smart functions, settings and problem solving so that user can refer to it when using TV.

You can watch the manual at the same time while watching TV or running the app.

You can easily view the user's manual using the Description menu or Magic Explorer function.

## 10. Safety default password

You can enter the default password "0000" to turn on/off safety function.

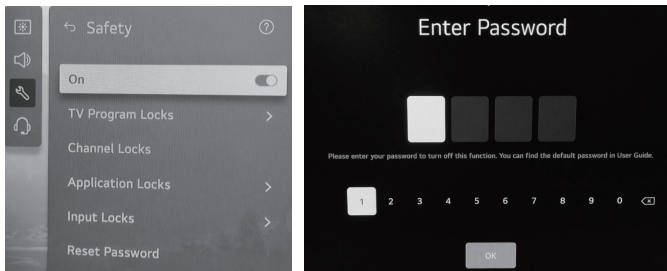

### [For Product Under PSTI Act 2022 and PSTI regulations 2023]

- Product Name : Smart TV,webOSHub2.0S  
 - Model Numbers :FN-TV19-S/FN-TV22-S/FN-TV24-S/FN-TV27-S  
 - Name and address of the Manufacturer : Falcon/ Hill Farm,Northwich Road,Dutton,Cheshire,WA4 4LE,United Kingdom

This statement of compliance is prepared on behalf of the manufacturer of the product and is a declaration that the product referenced above complies with the applicable security requirements in Schedule 1.

- The vulnerability disclosure policy for the product can be found at <https://lgsecurity.lge.com>
- A security vulnerability that affects the product can be reported via email at [product.security@lge.com](mailto:product.security@lge.com)
- The security update period for the product is 5 years from the webOSHub2.0S launch date. The product is supported until 31/12/2027.

The signature, name and function of the signatory :  
 The place and date of issue : Dutton UK, 1/3/2024.

*Chris Williams*  
 (Chris Williams/ Managing Director)

# FALCON

Angetrieben durch **webos** des Fernsehers



## **Kurzanleitung** FN-TV24-S

---

**Bitte diese Bedienungsanleitung vor dem TV-Betrieb sorgfältig durchlesen.  
Sie für zukünftige Referenzen aufbewahren .**

## VORWORT

1. Diese Kurzanleitung vor dem Start des Setups lesen.
2. Dann, Anweisungen sorgfältig befolgen und alle Warnungen beachten.
3. Die rückseitige Abdeckung des Fernsehers nicht entfernen und die Lüftungsöffnungen des Fernsehers nicht blockieren.
4. Fernseher nicht in der Nähe von Wasser oder einer Wärmequelle verwenden.
5. Netzkabel nicht zusammen drücken oder schneiden.

Beachten:

Das Produkt und die Abbildungen in dieser Bedienungsanleitung dienen nur zur Erläuterung und können je nach Modell variieren.

## WARNUNG

---

Ein Fernsehgerät an einem instabilen Ort niemals aufstellen. Ein Fernsehgerät kann herunterfallen und schwere Körperverletzungen oder den Tod verursachen. Viele Verletzungen, insbesondere bei Kindern, können durch einfache Vorsichtsmaßnahmen vermieden werden, wie zum Beispiel:

- Verwendung von Schränken oder Ständern, die vom Hersteller des Fernsehgeräts empfohlen werden.
- Möbel nur verwenden, die das Fernsehgerät sicher unterstützen können.
- Sicherstellen, dass das Fernsehgerät nicht über den Rand der Stützmöbel hinausragt.
- Das Fernsehgerät darf nicht auf hohen Möbeln (z. B. Schränken oder Bücherregalen) platziert werden, ohne sowohl die Möbel als auch das Fernsehgerät an einer geeigneten Stütze zu verankern.
- Das Fernsehgerät darf nicht auf Stoff oder andere Materialien gelegt werden, die sich zwischen dem Fernsehgerät und den Trägermöbeln befinden können.
- Aufklärung der Kinder über die Gefahren des Kletterns auf Möbel, um das Fernsehgerät oder seine Bedienelemente zu erreichen

Wenn Ihr vorhandenes Fernsehgerät beibehalten und verlegt wird, sollten die gleichen Überlegungen wie oben angewendet werden.

---

Die Stecker- oder Gerätekupplung wird als Trennvorrichtung verwendet, die Trennvorrichtung muss leicht bedienbar bleiben.

---




Die Begriffe HDMI und HDMI High-Definition Multimedia Interface sowie das HDMI-Logo sind Marken oder eingetragene Marken von HDMI Licensing Administrator, Inc. in den USA und anderen Ländern.

## 1. Fernseher und Zubehör aus dem Karton auspacken

1. Bitte Anweisungen zum Auspacken oben auf dem Karton (und unten) beachten.
2. As bemerkt, achten Sie darauf, den Fernsehbildschirm nicht zu greifen oder unter Druck zu setzen.
3. Karton auf alle enthaltenen Zubehörteile sorgfältig überprüfen.



NICHT



KEINE KLINGEN ZUM ÖFFNEN VERWENDEN



AUSPACKEN  
MIT VORSICHT

Für 27" - 58"



Für 27" , -58"



AUSPACKEN  
MIT VORSICHT

Für 27" - 58"



Für 27" , -58"

## 2.Packungsinhalt

- > LED-Fernseher
- > Fernbedienung mit Batterien
- > Eine fernbedienung auf DVD
- > Kurzanleitung
- >VESA-Befestigungsschrauben
- >Netzteil (12V,3A)
- >MINI AV-Kabel
- > 1,5 m Zigarettenanzünder mit roter Spitze
- > Standfuß und Schrauben

## 3.Was Sie für die Einrichtung benötigen (nicht im Lieferumfang enthalten)

- Philips Kopfschraubendreher
- Internetverbindung (erforderlich für Smart TV Streaming)
- Wireless Router (benötigt für Smart TV Streaming)
- Computer, Tablet oder Smartphone (erforderlich für die Einrichtung des Smart-TV )



## 4. Tischständer befestigen

### Ständer zusammenbauen

Wenn Sie den Ständer entfernen oder montieren müssen, bitte die folgenden Anweisungen lesen.

-Vor dem Anbringen/Abnehmen des Ständers, sicherstellen, dass Sie den Fernseher ausschalten.

-Polsterung vor der Arbeit über den Basisbereich verteilen, um den LED-Fernseher einzuschalten.

Dadurch wird verhindert, dass es beschädigt wird.


### Montageanleitung:

Fernseher auf den Tisch stellen, Ständer mit Abschleppen oder vier Schrauben im Karton befestigen.

Schritt 1: Bodenbaugruppe mit Schrauben befestigen, die im Karton angegeben sind.


Schritt 2: Die montierte Basis in das Loch einsetzen, die mit dem TV-Gerät gelieferten Schrauben herausnehmen und sie in Schraubenlöcher festziehen.

- Um den Ständer vom Fernseher zu trennen, die obigen Schritte in umgekehrter Reihenfolge ausführen.

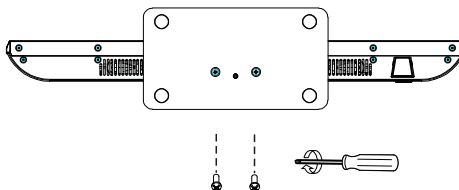

## 5. Frontplatte

Die Tasten unten rechts steuern die grundlegenden Funktionen Ihres Fernsehers, einschließlich des Bildschirmmenüs. Um die erweiterten Funktionen nutzen zu können, müssen Sie die Fernbedienung verwenden.

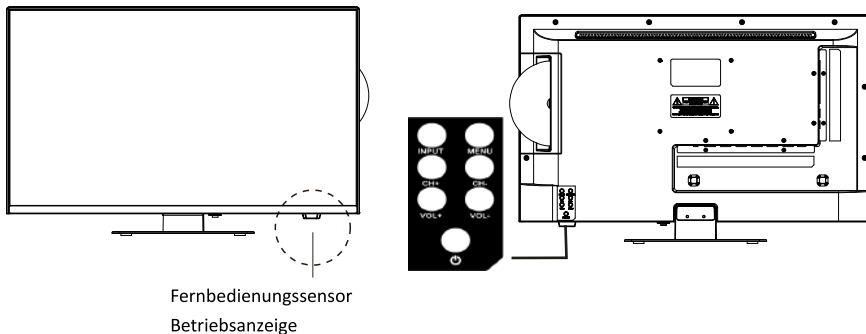

Fernbedienungssensor  
Betriebsanzeige

## 6. Spezifikationen

Modell	FN-TV24-S	
Displaygröße	24" Diagonal (max.)	
LED-Panel-Auflösung	1920x1080	
Audio-Ausgangsleistung	≤5W	
Energieversorgung	DC 10-30V	
Standby-Verbrauch	<0.5W	
Antenneneingang	75 Ohm	
Stromversorgung des Controllers	DC 1.5Vx2 (Zwei AAA-Batterien)	
Dimensi on (LxBxH)	TV mit Standfuß	W542xD349xH110(mm)
	TV ohne Standfuß	W542xD318xH45(mm)
Gewicht (Nettog ewicht)	TV mit Standfuß	3.2kg
	TV ohne Standfuß	3.1kg
Arbeitstemperatur	0°C-40°C	


### BEACHTEN:

- Design und Spezifikationen können ohne vorherige Ankündigung geändert werden.
- Gewicht und Dimension sind ungefähre Angaben.

## 7. Fernseher anschließen

1. Buchse des Netzteils in die Rückseite des Fernsehers stecken.  
dann Standard-DC -Steckerende in eine 12V-Steckdose vorsichtig stecken.
2. Wenn Sie andere Geräte an Fernseher anschließen, die entsprechenden optionalen Kabel verwenden und sie an die entsprechenden Anschlüsse auf der Rückseite oder Seite des Fernsehers anschließen.

Lage der Verbindungen

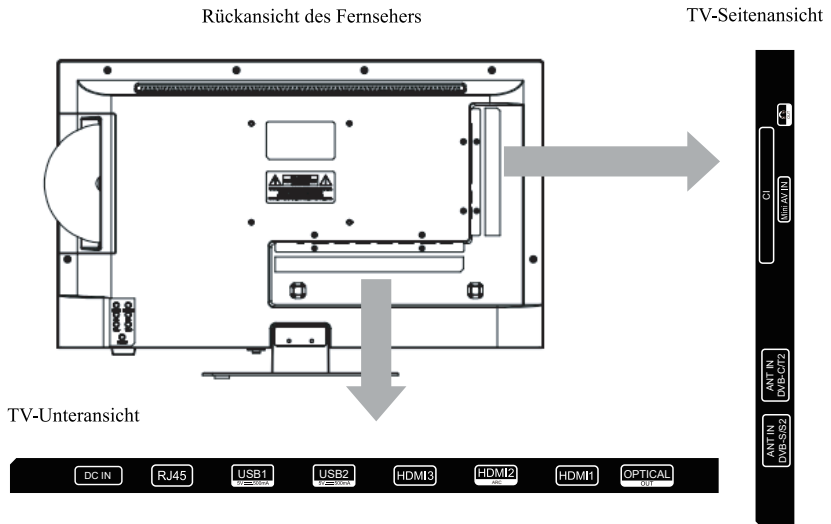

## 8. Fernbedienung vorbereiten

Batterieabdeckung entfernen und die mitgelieferten Batterien einlegen. dann Batterieabdeckung wieder einsetzen.


### Einlegen von Batterien

1. Abdeckung des Batteriefachs auf der Rückseite öffnen.




Batterieabdeckung

2. Zwei Batterien der Größe 1,5 V AAA in der richtigen Polarität einlegen. Keine alten oder gebrauchten Batterien mit neuen mischen.

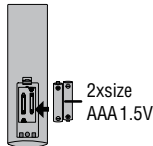

2xGröße AAA 1.5V

3. Deckel geschlossen.



Batterieabdeckung



+ Fernbedienung auf den Fernbedienungssensor des Fernsehers richten und Fernbedienungssensor innerhalb von 8 Metern verwenden.

+ Die gebrauchten Batterien in den Papierkorb werfen, da sie die Umwelt negativ beeinflussen können.


Beachten:

- 1) Batterien sollten bei normalem Gebrauch etwa ein Jahr halten (tatsächlicher Gebrauch kann variieren).
- 2) Wenn der Fernseher für einen längeren Zeitraum wieder aktiv ist, Batterien aus der Fernbedienung entfernen, um mögliche Schäden durch Leckagen zu vermeiden.
- 3) Alten und neue Batterien oder verschiedene Arten von Batterien nicht mischen.
- 4) Batterien nicht in Feuer oder Wasser werfen.
- 5) Die Batterien (Batteriepack oder Batterien im Stillstand) sollten nicht übermäßiger Hitze wie Sonnenschein, Feuer oder dergleichen ausgesetzt werden.

## Fernbedienung





**POWER:** ON/OFF.

: Selects an input source.


+/- : It adjusts the volume level.


^/∨ : You can change the program .


: Mutes the sound.


: Displays the Home menu.

:Voice input

: It displays the additional buttons on the remote control.

: Return to the previous menu / Exit the menu

: Enters the Quick Settings menu.

: Channel list.

**Netflix:** go to Netflix app.

**Prime Video:** go to Prime Video app.

**Disney+:** go to Disney+ app.

**LG Channels:** go to LG channels.

**Fplay:** go to Freeview Play app.

**Rakuten TV:** go to Rakuten TV app.



POWER (rot)	DVD Modus ein-/ausschalten
EJECT (grün)	Wirft die DVD aus
SETUP	Einstellungen des DVD-Modus
MENU	Öffnet das Hauptmenü
GOTO	Funktionstaste
ZIFFERTASTEN	Zur Eingabe von z.B. Programmnummern
▶	Start / Pause
■	Stopp
◀◀ / ▶▶	Vorwärts spulen / Rückwärts spulen
◀◀ / ▶▶	Vorheriges Kapitel / Nächstes Kapitel
OK	Auswahl bestätigen

Um eine DVD abspielen zu können, nutzen Sie bitte die im Lieferumfang befindliche DVD Fernbedienung.

Mit dieser können über die Power-Taste der DVD-Fernbedienung in den DVD-Modus oder zurück in den TV-Modus wechseln.

Zudem wechselt das Gerät automatisch in den DVD-Modus, wenn Sie eine DVD in den dafür vorgesehenen DVD-Slot einziehen lassen.

Die Bedienung im DVD-Modus ist abhängig von der Datenstruktur auf der DVD.

Ein original Kauffilm beispielsweise, wird sofort in die Hauptübersicht zur Wiedergabe wechseln.

### Hinweis

Zur Inbetriebnahme der DVD Fernbedienung entfernen Sie bitte die Batterie-Kontaktfolie, indem Sie diese herausziehen.


## 9. Trouble Shooting

### Probleme?

Keine Sorge, es ist normalerweise eine einfache Lösung.

Nach Auto Tuning sind nur einige Kanäle verfügbar	Überprüfen, ob Ihr Gebiet von digitalen Videoübertragungen abgedeckt wird. Versuchen, fehlende Kanäle neu abzustimmen oder manuell einzustellen. Überprüfen, ob Sie den richtigen Antennentyp verwenden.
Kanal kann nicht ausgewählt werden	Überprüfen, ob der Kanal in den Einstellungen des Hauptmenüs blockiert wurde.
USB spielt nicht ab	Bitte überprüfen, ob das USB-Kabel angeschlossen ist und das Netzteil angeschlossen ist. Die Festplatte wurde nicht formatiert. Bitte sicherstellen, dass die USB-Festplatte kompatibel ist und die Multimedia-Datenformate unterstützt werden.
Bild ist verzerrt, Makroblock, kleiner Block, Punkte, Verpixelung usw.	Die Komprimierung von Videoinhalten kann insbesondere bei sich schnell bewegenden Bildern wie Sport- und Actionfilmen zu Verzerrungen führen.
Geräusche vom Lautsprecher	Kabelverbindungen überprüfen, sicherstellen, dass kein Videokabel an einen Audioeingang angeschlossen ist. Ein niedriger Signalpegel kann zu Schallverzerrungen führen.
Fernseher schaltet sich automatisch aus	Überprüfen, ob der Aus-Timer im Setup-Menü auf Ein eingestellt ist. Der Energiesparmodus wurde möglicherweise aktiviert. Wenn etwa 10 Minuten lang kein Signal von einem Eingang ausgegeben wird, schaltet sich der Fernseher aus.
TV schaltet sich automatisch ein	Überprüfen, ob der Einschalttimer im Setup-Menü auf Ein eingestellt ist.
Bild wird nicht im Vollbildmodus angezeigt	Schwarze Balken auf jeder Seite werden auf HD-Kanälen angezeigt, wenn SD-Inhalte (4:3) angezeigt werden. Schwarze Balken oben und unten werden bei Filmen angezeigt, deren Seitenverhältnisse sich von denen Ihres Fernsehers unterscheiden. Bildgrößenoption auf Ihrem externen Gerät oder Fernseher auf Vollbild anpassen.

## WEE2.0

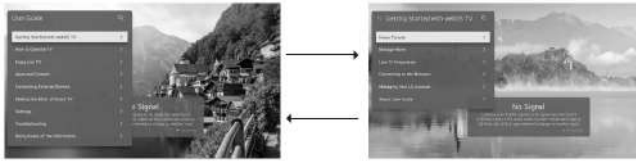


Es bietet Anleitungen zur TV-Manipulation, Ausstrahlung, Inhaltsnutzung, Geräteverbindung, intelligenten Funktionen, Einstellungen und Problemlösung, so dass sich der Benutzer bei der Verwendung von TV darauf beziehen kann.

Sie können die Bedienungsanleitung gleichzeitig ansehen, während Sie fernsehen oder die App ausführen. Sie können die Bedienungsanleitung ganz einfach über das Menü Beschreibung oder die Magic Explorer-Funktion anzeigen.

## 10. Sicherheits-Standardpasswort

Sie können das Standardpasswort „0000“ eingeben, um die Sicherheitsfunktion ein- und auszuschalten.

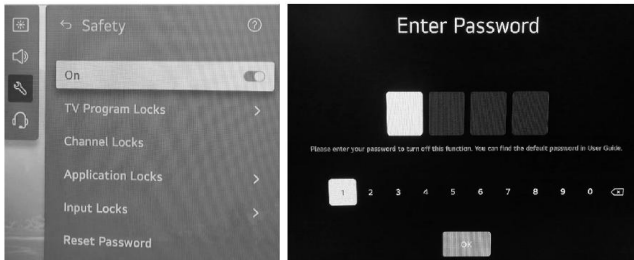

### [For Product Under PSTI Act 2022 and PSTI regulations 2023]

- Product Name : Smart TV webOSHub2.0S
- Model Numbers : FN-TV19-S/FN-TV22-S/FN-TV24-S/FN-TV27-S
- Name and address of the Manufacturer : Falcon/ Hill Farm, Northwich Road, Dutton, Cheshire, WA4 4LE, United Kingdom

This statement of compliance is prepared on behalf of the manufacturer of the product and is a declaration that the product referenced above complies with the applicable security requirements in Schedule 1.

- The vulnerability disclosure policy for the product can be found at <https://lqsecurity.lge.com>
- A security vulnerability that affects the product can be reported by email at [product.security@lge.com](mailto:product.security@lge.com)
- The security update period for the product is 5 years from the webOSHub2.0S launch date. The product is supported until 31/12/2027.

The signature, name and function of the signatory :  
The place and date of issue : Dutton UK, 1/3/2024.

  
(Chris Williams/ Managing Director)